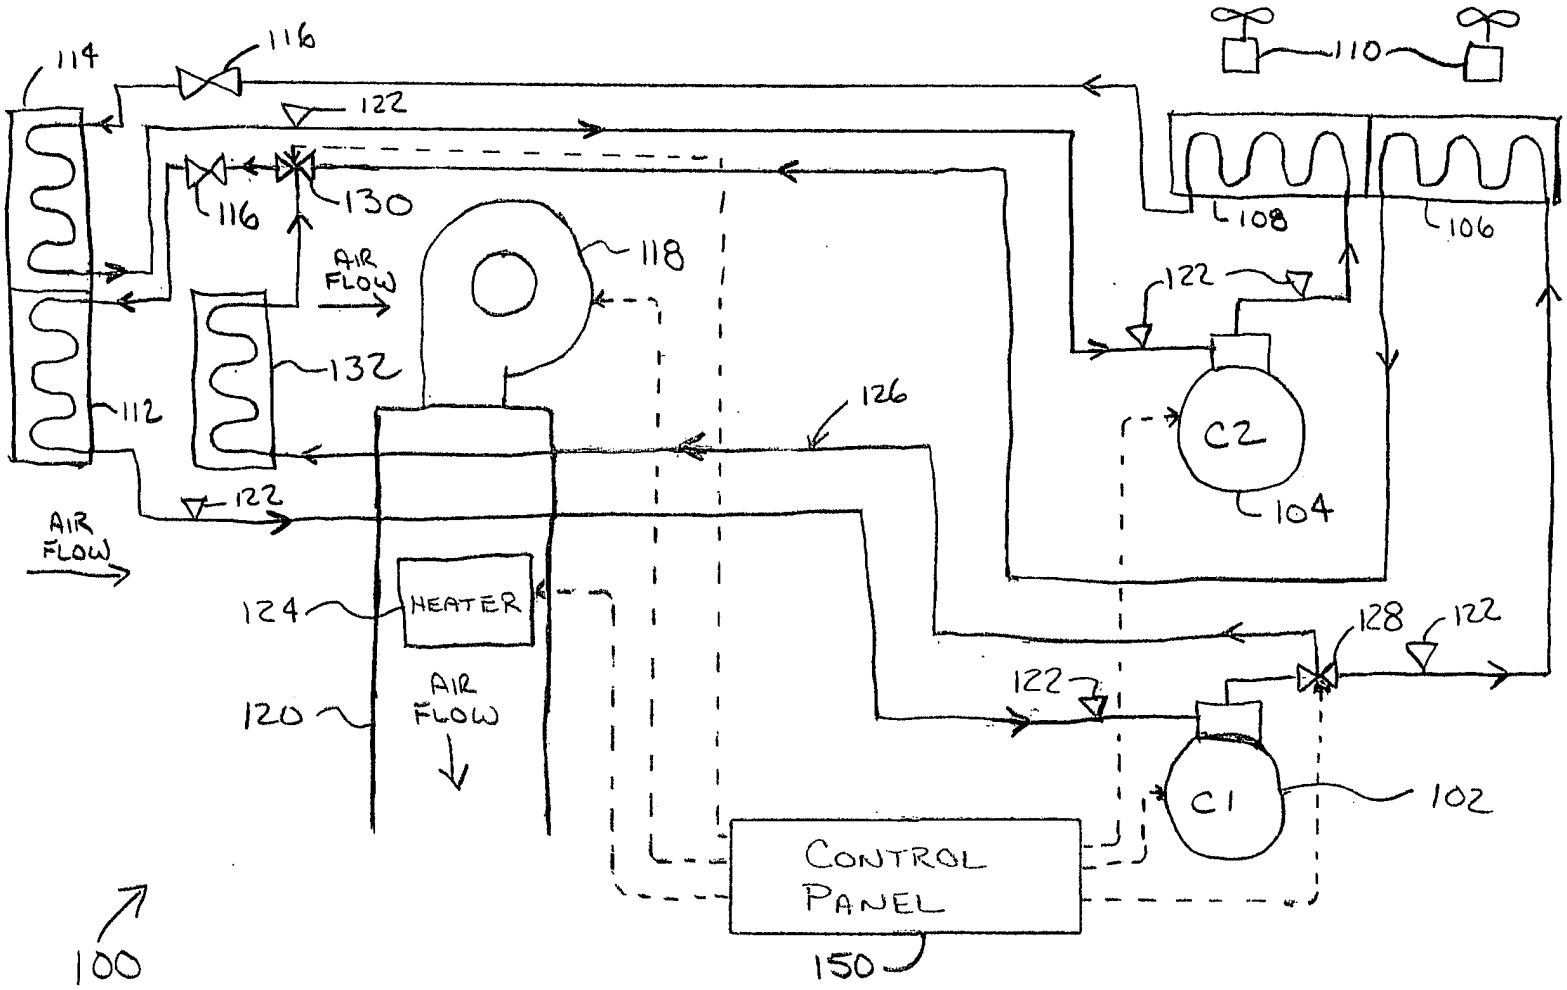

114
116
122
110
116
130
108
106
AIR FLOW
118
132
122
112
126
C2
104
AIR FLOW
122
124
HEATER
128
122
AIR FLOW
120
122
C1
102
CONTROL PANEL
150
100

FIGURE 1

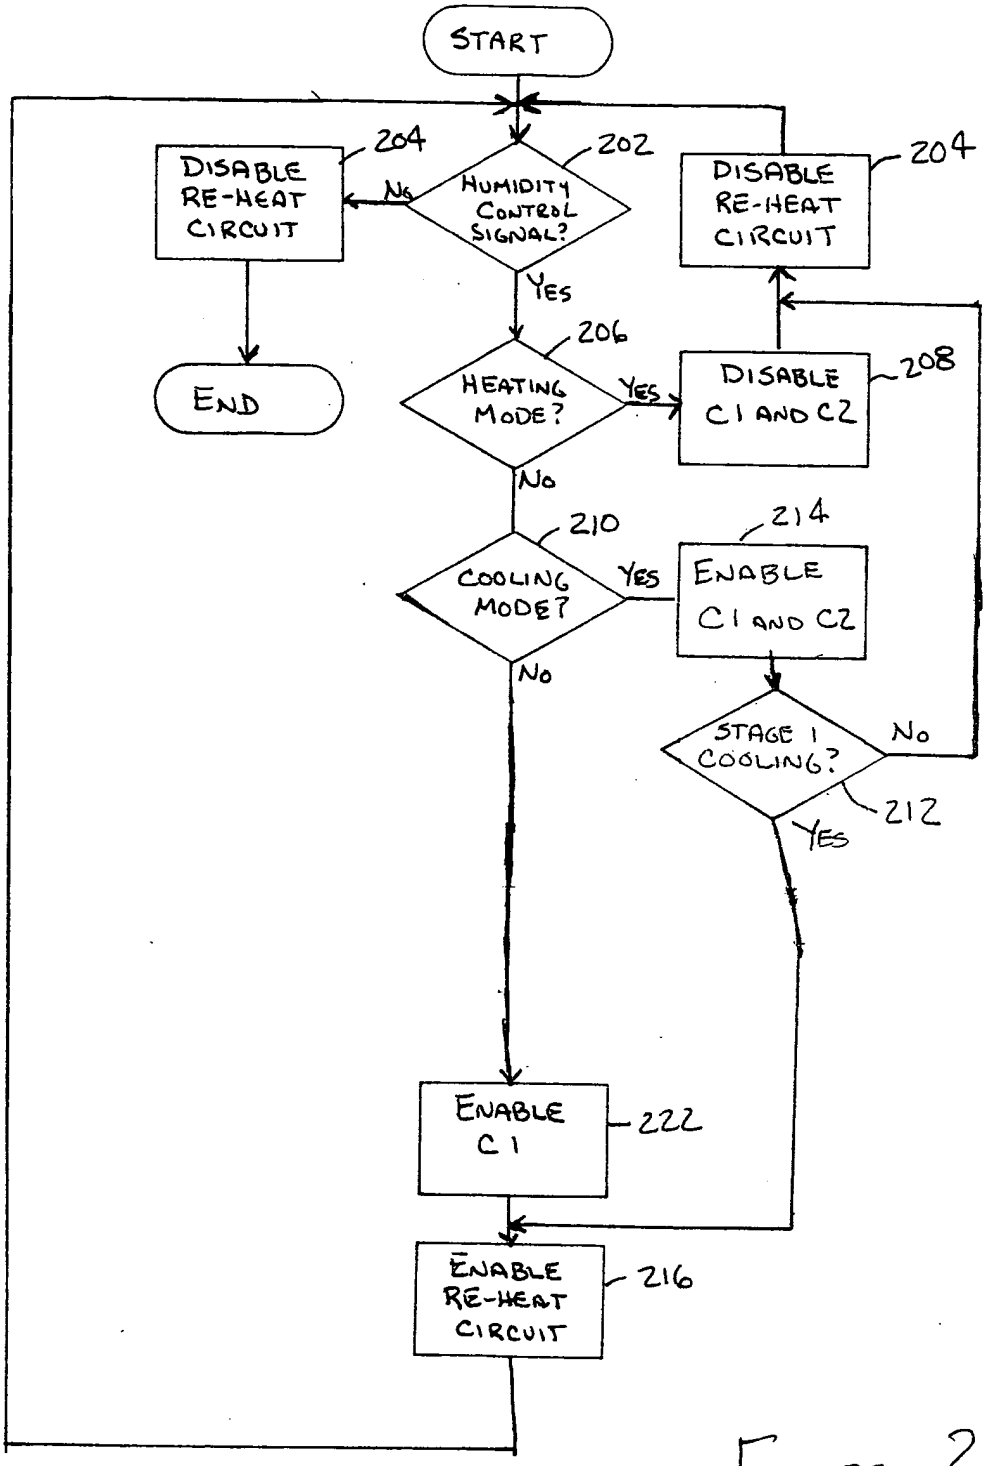

START
DISABLE RE-HEAT CIRCUIT
204
HUMIDITY CONTROL SIGNAL?
202
No
Yes
END
HEATING MODE?
206
Yes
DISABLE C1 AND C2
208
DISABLE RE-HEAT CIRCUIT
204
No
COOLING MODE?
210
Yes
ENABLE C1 AND C2
214
No
STAGE 1 COOLING?
212
Yes
ENABLE C1
222
ENABLE RE-HEAT CIRCUIT
216

FIGURE 2